



The module is approximately 1" X 1" X 2". It has seven wire leads coming out of it. Two wires (Red and Black) go to the battery. Two wires (White and Black) go to the actuator. A three conductor zip bundle (Brown Yellow and Green) go to the switch on the Joy stick. The switch on the joy stick is not supplied, but it is a common switch usually already on the grip. This switch should be a single pole double throw center return, or two single pole single throw push button type also commonly found in some grips. Installation is straight forward and instructions are included. The reason this module is needed is the light duty single pole switch on the joy stick can not handle the current drawn by the actuator and they are mostly single pole where the actuator requires double pole.